



1. Take one of the screws out of the click system. Loosen the other screw to the end of the nut.

2. Attach the click system to the rear of the saddle and mount it.

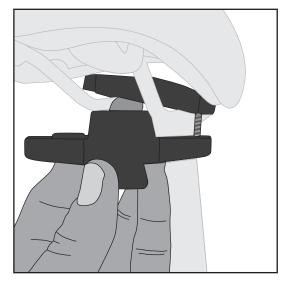

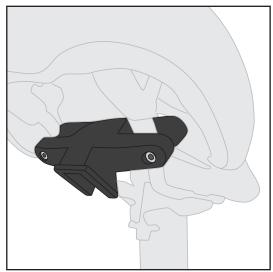

ATTENTION!

